


Hans M. Knoll

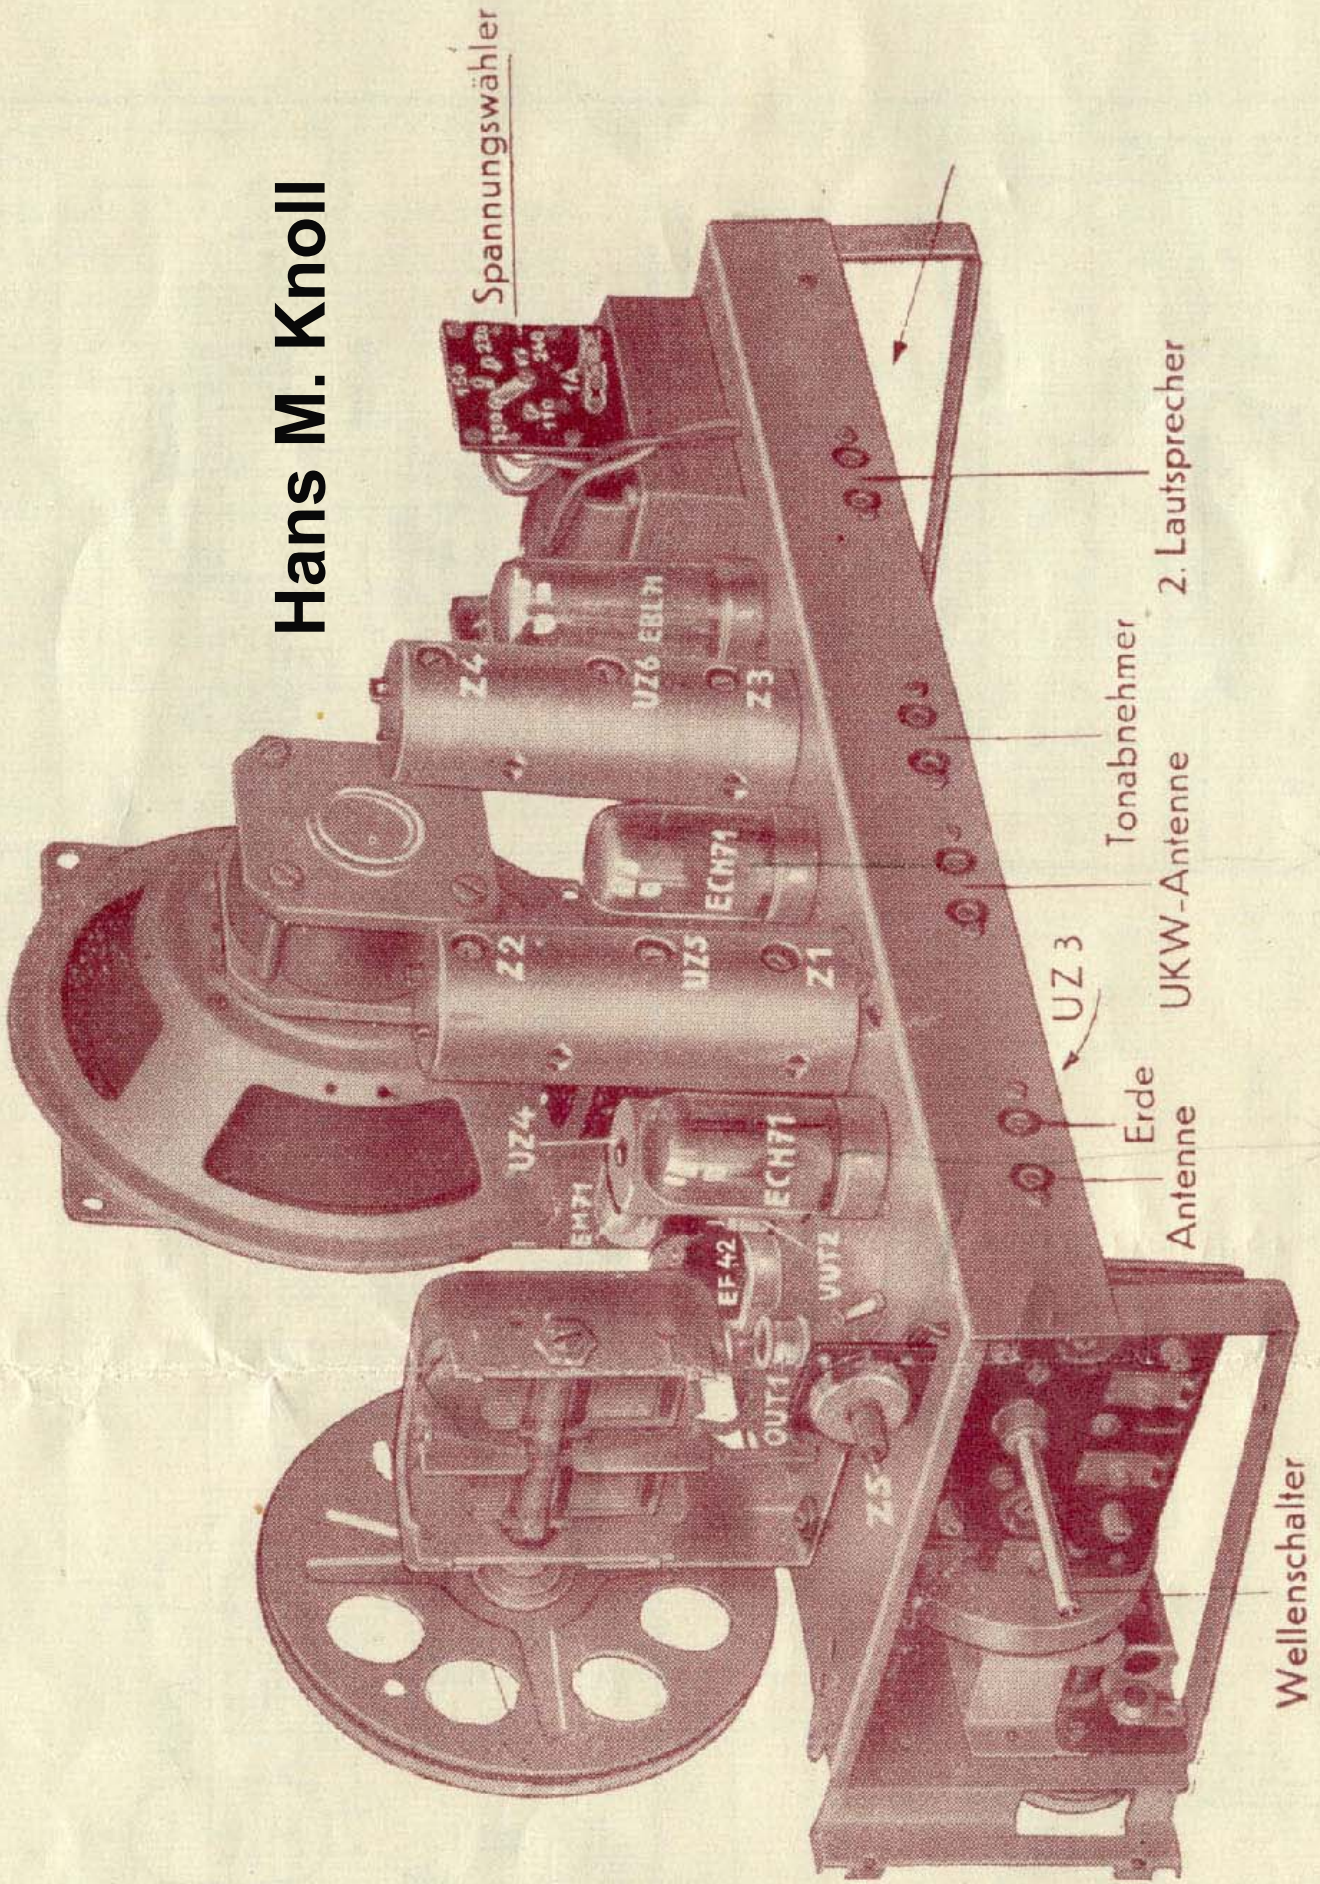

Spannungswähler

2. Lautsprecher

Tonabnehmer

UKW-Antenne

UZ 3

Erde

Antenne

Wellenschalter

UZ4

UZ5

Z4

UZ6 EBL7A

Z3

ECH74

Z1

ECH71

VUTZ

EF-42

OUT1

Z5