

THE CROSLY CORP.

MODELS 56TA, 56TW, 56TC

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W-48858	Dial Light, 6.3 V.	21	39001-63	Condenser, .022 mfd., 200 v., Paper
2	C-132300-1	Power Cable and Plug	22	39001-63	Condenser, .022 mfd., 200 v., Paper
3		Ant. Loop (Part of Antenna Loop and Back Assembly. See Cabinet Parts.)	23	Part of Item #10	B. C. Osc. Trimmer
4	AW-134994	H. F. Ant. Coil	24	39281-17	Resistor, 470 Ohm, 1/2 w.
5A	AW-134993	B. C. Osc. Coil (Dual)	25	39281-17	Resistor, 470 Ohm, 1/2 w.
5B		H. F. Osc. Coil / Coil	26	39281-28	Resistor, 330,000 Ohm, 1/2 w.
6	AW-134065	1st I. F. Transformer	27	39281-38	Resistor, 15 Megohm, 1/2 w.
7	AW-134168	2nd I. F. Transformer	28	39281-21	Resistor, 22,000 Ohm, 1/2 w.
8	B-134995	Variable Condenser / Section	29	39281-34	Resistor, 3.3 Megohm, 1/2 w.
9A		H. F. Ant. Trimmer	30	39281-35	Resistor, 47,000 Ohm, 1/2 w.
9B		Condenser, 580 mmf., 300 V. Mica	31	39281-29	Resistor, 470,000 Ohm, 1/2 w.
10	GC-210685-143	Condenser, 50 mmf., Mica	32	39281-8	Resistor, 470,000 Ohm, 1/2 w.
11	39004-5	Condenser, .022 mfd., 200 V. Paper	33	39281-8	Resistor, 160 Ohm, 1/2 w.
12	39001-63	Condenser, .022 mfd., 200 V. Paper	34	39281-8	Resistor, 160 Ohm, 1/2 w.
13	39001-67	Condenser, .1 mfd., 200 V. Paper	35	39281-8	Resistor, 160 Ohm, 1/2 w.
14	39001-65	Condenser, .05 mfd., 200 V. Paper	36	GC-49675-9	Speaker
15	39004-9	Condenser, 220 mmf., Mica	37A	49772-3	Band Change Switch (Three Section)
16		Condenser, .0033 mfd., 600 V. Paper	37B		Band Change Switch (Section)
17		Condenser, 15 mfd., 140 V. Section	37C		Control, Volume (1 Megohm) } Assy.
18A	W-134177	Condenser, 15 mfd., 120 V. Filter	38A	C-46846-6	B. C. Ant. Trimmer
18B		Condenser, 15 mfd., 120 V. Filter	38B	Part of Item #3	
19	39001-63	Condenser, .022 mfd., 200 V. Paper	39	Part of Item #3	
20	39001-63	Condenser, .022 mfd., 200 V. Paper			
21	39001-63	Condenser, .022 mfd., 200 V. Paper			
22	39001-63	Condenser, .022 mfd., 200 V. Paper			
23	Part of Item #10	B. C. Osc. Trimmer			
24	39281-11	Resistor, 470 Ohm, 1/2 w.			
25	39281-17	Resistor, 470 Ohm, 1/2 w.			
26	39281-28	Resistor, 330,000 Ohm, 1/2 w.			
27	39281-38	Resistor, 15 Megohm, 1/2 w.			
28	39281-21	Resistor, 22,000 Ohm, 1/2 w.			
29	39281-27	Resistor, 220,000 Ohm, 1/2 w.			
30	39281-34	Resistor, 3.3 Megohm, 1/2 w.			
31	39281-23	Resistor, 47,000 Ohm, 1/2 w.			
32	39281-35	Resistor, 47,000 Ohm, 1/2 w.			
33	39281-29	Resistor, 470,000 Ohm, 1/2 w.			
34	39281-29	Resistor, 470,000 Ohm, 1/2 w.			
35	39281-8	Resistor, 160 Ohm, 1/2 w.			
36	GC-49675-9	Speaker			
37A	49772-3	Band Change Switch (Three Section)			
37B		Band Change Switch (Section)			
37C		Control, Volume (1 Megohm) } Assy.			
38A	C-46846-6	B. C. Ant. Trimmer			
38B	Part of Item #3				
39	W-47577	Cable Lock Plate			
	C-135175	Dial Face			
	B-134570	Dial Pointer			
	W-134667	Dial Pointer Clip			
	W-51752	Dial Cord Spring			
	39017-4	Dial Light Socket Assembly			
	W-134917	Drive Shaft			
	W-51071	Retaining Ring			

MODELS 56TA-L, 56TW-L, 56TC-L

Item No.	Part No.	Description
1	W-48858	Dial Light, 6.3 v.
2	C-132300-1	Power Cable and Plug
3		Ant. Loop (Part of Antenna Loop and Back Assembly. See Cabinet Parts.)
4	AW-134994	H. F. Ant. Coil
5A	AW-134993	B. C. Osc. Coil (Dual)
5B		H. F. Osc. Coil / Coil
6	AW-134065	1st I. F. Transformer
7	AW-134168	2nd I. F. Transformer
8	B-134995	Variable Condenser / Section
9A		H. F. Ant. Trimmer
9B		Condenser, 580 mmf., 300 v., Mica
10	GC-210685-143	Condenser, 50 mmf., 500 v., Mica
11	39004-5	Condenser, .022 mfd., 200 v., Paper
12	39001-63	Condenser, .022 mfd., 200 v., Paper
13	39001-67	Condenser, .1 mfd., 200 v., Paper
14	39001-65	Condenser, .05 mfd., 200 v., Paper
15	39004-9	Condenser, 220 mmf., 500 v., Mica
16		Condenser, .0033 mfd., 600 v., Paper
17		Condenser, 15 mfd., 140 v. Section
18A	W-134177	Condenser, 15 mfd., 120 v. Elect.
18B		Condenser, 15 mfd., 120 v. Filter
19	39001-63	Condenser, .022 mfd., 200 v., Paper
20	39001-63	Condenser, .022 mfd., 200 v., Paper

Item No.	Part No.	Description
21	39001-63	Condenser, .022 mfd., 200 v., Paper
22	39001-63	Condenser, .022 mfd., 200 v., Paper
23	Part of Item #10	B. C. Osc. Trimmer
24	39281-17	Resistor, 470 Ohm, 1/2 w.
25	39281-17	Resistor, 470 Ohm, 1/2 w.
26	39281-28	Resistor, 330,000 Ohm, 1/2 w.
27	39281-38	Resistor, 15 Megohm, 1/2 w.
28	39281-21	Resistor, 22,000 Ohm, 1/2 w.
29	39281-34	Resistor, 3.3 Megohm, 1/2 w.
30	39281-35	Resistor, 47,000 Ohm, 1/2 w.
31	39281-29	Resistor, 470,000 Ohm, 1/2 w.
32	39281-29	Resistor, 470,000 Ohm, 1/2 w.
33	39281-8	Resistor, 160 Ohm, 1/2 w.
34	39281-8	Resistor, 160 Ohm, 1/2 w.
35	39281-8	Resistor, 160 Ohm, 1/2 w.
36	GC-49675-9	Speaker
37A	49772-3	Band Change Switch (Three Section)
37B		Band Change Switch (Section)
37C		Control, Volume (1 Megohm) } Assy.
38A	C-46846-6	B. C. Ant. Trimmer
38B	Part of Item #3	
39	Part of Item #3	
	W-47577	Cable Lock Plate
	C-135175	Dial Face
	B-134570	Dial Pointer
	W-134667	Dial Pointer Clip
	W-51752	Dial Cord Spring
	39017-4	Dial Light Socket Assembly
	W-134917	Drive Shaft
	W-51071	Retaining Ring

Figures in first column correspond to figures in Schematic Diagram